


Appendix C

Ventilation and Purge Chart

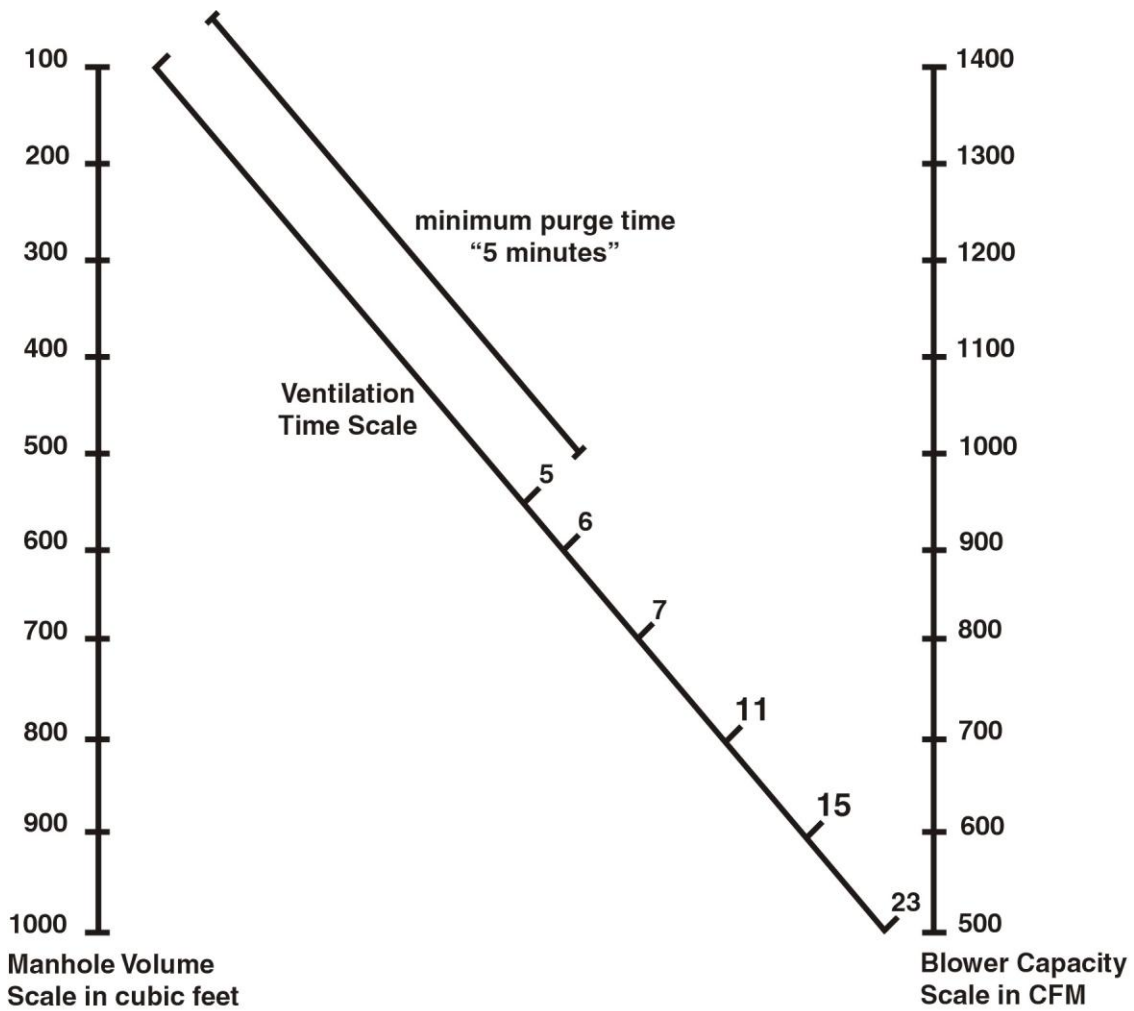

DIRECTIONS

1. Locate manhole volume level on left scale.
2. Read the corresponding blower capacity on the right scale.
3. Locate the required purge time (minimum 5 minutes) from the diagonal scale.